



Instructions for the WEEKLY CTS Containerboard Interlaboratory Testing Program

Samples for tests 205, 206, 207, 215, 216, 217, 223, 224 & 225 are tested approximately one week apart in the month indicated on the accompanying data sheets. Open, condition and test the samples in your laboratory at the TAPPI standard conditions of 50 % RH and 23 ° C. *If your lab cannot test according to TAPPI standard conditions, then test the samples immediately after removing them from the sealed packet, testing the most moisture-sensitive properties (Ring Crush or STFI) first.* Report on your data sheet the relative humidity and temperature of your testing room, if known.

LINERBOARD

Three weights of linerboard are used as samples in the program: 36 lb., 42 lb., and 69 lb. The 42 lb. linerboard is sent each month, the 69 lb. is sent in even numbered testing cycles, and the 36 lb. in odd numbered testing cycles. Each package of material is marked with the board weight.

For **EACH** linerboard test in which you have enrolled, you will find enclosed four packages of 42 lb. and four packages of either the 36 lb. or 69 lb. linerboard, with each package containing five 6" by 8" sheets. The long direction of each sheet is cut in the machine direction. Arbitrarily designate the sheets 1 through 5 and identify each test piece in accordance with the sheet from which it was cut. Consult the appropriate test method and the diagrams on the right for instructions on specimen preparation.

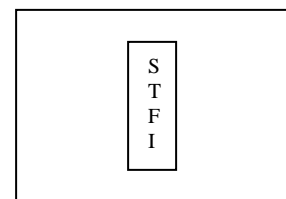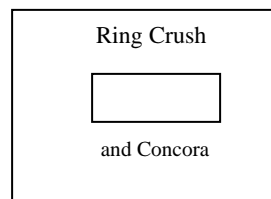

☹☹ Remember, one package per week per test. ☹☹

205, 206 & 207 MULLEN BURST

Cut two test specimens from each sheet, condition to 50% R.H. for 24 hours, and test in accordance with TAPPI Method T807, Bursting Strength of Paperboard and Linerboard. Perform an equal number of tests on each side of the sheet i.e., five tests on the top side of the sheet and five tests on the bottom side of the sheet.

215, 216 & 217 RING CRUSH (Rigid Platen)

Cut two test specimens from each sheet and condition to 50% R.H. for 24 hours. Follow TAPPI Method T822, Ring Crush of Paperboard (Rigid Support Method).

NOTE: For the Mullen Burst and Ring Crush tests, if a false reading is obtained during the test (from an imperfection in the test specimen or from mechanical difficulty), leave a blank on the data sheet in place of the result. Do not, however, eliminate more than two readings on the data sheet. Contact CTS if you have more than 2 invalid readings.

223, 224 & 225 STFI COMPRESSION

Cut one 15mm wide test specimen from each sheet in the cross machine direction and condition to 50% R.H. for 24 hours. Test in accordance with TAPPI Method T826, Short Span Compressive Strength of Paperboard. Make a total of 20 tests with not more than four tests on each specimen.

Report the average **uncorrected** STFI compressive strength (STRENGTH on the STFI printout), the coefficient of variation in %, and the sum of these two numbers.

CORRUGATING MEDIUM

For EACH medium test in which you have enrolled, we have enclosed four packages of 26 lb. corrugating medium, with each package containing five 6" by 8" sheets. The long direction of each sheet is cut in the machine direction. Arbitrarily designate the sheets 1 through 5 and identify each test piece in accordance with the sheet from which it was cut. Refer to the diagrams on the front page of these instructions for sample cutting directions.

CONCORA

Cut two specimens from each sheet, condition to 50% R.H. for 24 hours, and test in accordance with TAPPI Method T809, Flat Crush of Corrugating Medium.

CORRUGATED FLUTED CRUSH

Cut two specimens from each sheet, condition to 50% R.H. for 24 hours, and test in accordance with TAPPI Method T824, Fluted Edge Crush of Corrugating Medium, while referring to TAPPI Method T809 for details on the fluting of the medium specimens.

RING CRUSH (Rigid Platen)

Cut two specimens from each sheet and condition to 50% R.H. for 24 hours. Follow TAPPI Method T822, Ring Crush of Paperboard (Rigid Support Method). Test one specimen from each sheet with the wire side to the outside, and one with the wire side to the inside.

NOTE: For Concora (CMT), Corrugated Fluted Crush (CFC) and Ring Crush (RCT) analyses, test only two specimens from each sheet, except when mechanical difficulties occur during a test. In that case, discard the test reading, and prepare and test another specimen.

STFI COMPRESSION

Cut one 15mm wide test specimen from each sheet in the cross machine direction and condition to 50% R.H. for 24 hours. Test in accordance with TAPPI Method T826, Short Span Compressive Strength of Paperboard. Make a total of 20 tests with not more than four tests on each specimen.

Report the average **uncorrected** STFI compressive strength (STRENGTH on the STFI printout), the coefficient of variation in %, and the sum of these two numbers.

We prefer to receive the data sheets as you perform the test(s) each week. However, *your results for all 4 weeks must be received at CTS by the date indicated on the data sheets to be included in the analyses.*

Instructions for the MONTHLY CTS Containerboard Interlaboratory Testing Program

Tests in the monthly Containerboard Program are conducted 12 times per year. Each monthly sample pack contains sufficient samples to perform the test once during the month, with the exception of box compression. Box compression samples are sent annually as a bulk shipment for testing each month.

TESTS 201, 202, 228, 231, 234 & 237

201 - BOX COMPRESSION TEST (BCT), Top to Bottom Compression

Conduct testing following TAPPI T804. Labs should be cautioned that because of the size of the samples, the test boxes have not been preconditioned. Please precondition, then condition the specimens according to TAPPI T402. Laboratories are asked to erect and seal the box flaps using the procedure most commonly used in their laboratory. **Please indicate on the data sheet the method used to seal the box flaps. The minor flaps of the box must also be secured, even if this is not the routine procedure in your laboratory.** If the reporting units, testing conditions or instrument used differ from those listed on the data sheet, please write the correction in the space provided on the data sheet.

202 & 203 - EDGEWISE COMPRESSION STRENGTH (ECT)

Laboratories may report results for TAPPI T811 or TAPPI T839. Participants may report results for both methods, if both methods are routinely performed. Conduct testing according to the procedures outlined in the chosen method, including: sample cutting, specimen preparation and specimen size. Please note variations from the chosen method on the data sheet. **Be sure that you use the correct data sheet to report the results from your chosen method – Analysis 202 for T811 (wax) and Analysis 203 for T839 (clamp).**

Verify that you have indicated a valid unit for ECT data (*the default unit is lbf/in*) on your data sheets.

For all labs:

1. Please cut specimens from the, "cleanest," portion of each specimen. Avoid the edges of the specimen and any crushed, partially crushed or deformed sections.
2. Report lab humidity and temperature.
3. If unable to condition the samples in the TAPPI standard atmosphere, please prepare and test the specimens as soon as the barrier bag has been opened
4. Cut one test specimen from each supplied blank. If the specimen does not exhibit a valid failure, cut a second specimen from the same blank.

È È Remember: Divide load by 2 to report as lbf/in for 2 inch sample, if applicable. È È

For labs using TAPPI T811:

Labs testing within TAPPI standard condition of 50 " 2% R.H.:

1. Condition the corrugated fiberboard to 50% R.H. for 24 hours, then cut one 2" x 1.5" specimen from each board with the 2" width perpendicular to the axis of the flutes.
2. Wax the loading edge of all specimens and *condition them for two more hours.*
3. Test the specimens in accordance with TAPPI Official Test Method T811.
4. Record the maximum load of ten valid failures; convert readings and report as lbf/inch or kN/m.
5. If a specimen from a board does not exhibit a valid failure, cut another test piece from the same board and retest. Do not cut more than two specimens from a piece of fiberboard.

228 - ROUGHNESS, STYLUS METHOD

Perform testing according to TAPPI Method T575 and the instrument manufacturer's instructions using the following settings:

Number of Readings: 500 Sample Spacing: 0.01"

Speed: 400 Group Spacing: 0.01"

Number of Groups: 1

Each sample is composed of five (5) specimens. For each specimen record two determinations; both determinations should be made on the top (felt) side in non-overlapping (at least 0.25" offset), regular intervals in the long direction of each sheet. Report the smoothness in microdeviations for 10 determinations.

231 - INTERNAL BOND STRENGTH

Cut the test piece from the center of the sample sheet with its length parallel to the long direction of the sheet and test in accordance with TAPPI Method T569. Calibrate the instrument to low range scale. Prepare test pieces 2.5 cm (1 in.) wide and 16.5 cm (6.5 in.) long. It is recommended that the sample and tape be clamped together for two seconds using a pressure of 100 psi. For each test piece (specimen), average the five readings; discard readings of samples that do not completely separate. Report the average of the five readings as one determination on your data sheet.

234 - COEFFICIENT OF STATIC FRICTION (Slide Angle, Incline Plane Method)

A total of 5 (6" x 8") sheets of linerboard have been supplied. The 8" side is parallel to the machine direction; identify the felt and wire (top and bottom) sides of the first sheet and ensure that the other sheets are orientated in the same manner. Follow TAPPI Method T815.

Cut one sled and one base piece from each sample sheet, so that the long edge of the samples is the test direction. Sled pieces will be attached to the sled with the **felt** (bottom) side down. Attach base pieces to the base with **felt** (bottom) side up. **This should yield a test setup measuring slide angle for a MD to MD and felt/bottom side to felt/bottom side orientation.**

If the sled to be used has a soft rubber backing, the sled piece will likely not need to be secured to the sled. If the sample needs to be secured to the sled, it is recommended that the sample be scored prior to folding. Allow a dwell time of 10 seconds before increasing the angle. Record the slide angle in degrees. It is recommended that a 2" x 4", 750g sled be used. Please note on the data sheet the size and mass of the sled used in testing, if different than the recommended size.

237 - AIR RESISTANCE (Gurley Method)

Test in accordance with TAPPI Method T460. For this analysis make one determination on each side of the 6" x 8" sheet. Report the readings for each side and the total of the ten determinations from the five specimens.

**If you are mailing your results to us from outside the United States (except Canada and Mexico), please add appropriate postage to assure AIRMAIL delivery.
You may also return data by FAX (571-434-1937).
Type or print the data using blue or black ink prior to faxing.**

If you have any questions or are missing any items, please contact CTS at 571-434-1925.